PK Lock Cores *SOUTHCO®* Key-Choice System



Lock Cores - Disc Tumbler


	Lock Core Part Number								
Keying	Key code	Bag qty	Shuttered stainless steel scalp	Non shuttered stainless steel scalp	Non shuttered black powder coated	Non shuttered chrome plated			
KA	CH751	1	PK-39-72-13-KCH751	PK-132-13	PK-115-13	РК-116-13			
KA	RS001	1	PK-39-72-13-RS001	PK-132-13-RS001	PK-29-15-13-RS001	PK-29-16-13-RS001			
KD	10 CODES	10	PK-39-72-13-KD1010	PK-132-13-KD1010	PK-29-15-13-KD1010	PK-29-16-13-KD1010			
KD	50 CODES	50	PK-39-72-13-KD1050	PK-132-13-KD1050	PK-29-15-13-KD1050	PK-29-16-13-KD1050			
KD	125 CODES	125	PK-39-72-13-KD1125	PK-132-13-KD1125	PK-29-15-13-KD1125	PK-29-16-13-KD1125			
MKKD	10 CODES	10	PK-39-72-13-MK1010	PK-132-13-MK1010	PK-29-15-13-MK1010	PK-29-16-13-MK1010			
MKKD	50 CODES	50	PK-39-72-13-MK1050	PK-132-13-MK1050	PK-29-15-13-MK1050	PK-29-16-13-MK1050			
MKKD	125 CODES	125	PK-39-72-13-MK1125	PK-132-13-MK1125	PK-29-15-13-MK1125	PK-29-16-13-MK1125			

Keys	Part Number		
Master Key (1)	PK-24-01		
Control (Removal) Key (1)	PK-11-03		


Lock Cores - Tool Operable

	Lock Core Part Number					
Hood Style	Phillips recess	Slotted	4 mm Hex recess	8 mm Hex recess		
Head Style	+		\bigcirc			
Chrome plated	PK-0-34027-01	PK-0-43489-01	PK-0-34323-01	РК-0-40374-01		
Black powder coated	PK-0-34027-50	РК-0-43489-50	PK-0-34323-50	РК-0-40374-50		

Lock Core Installation for CM-3 and CM-6 only (see page 188)

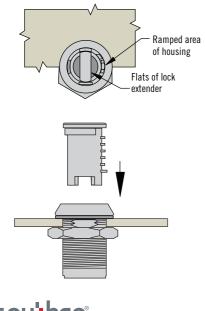

SOULICE CONNECT - CREATE - INNOVA

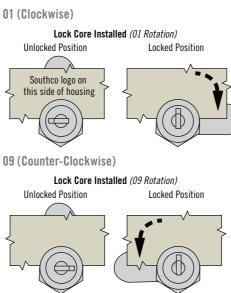

Southco logo on this side of housing

Dimensions in millimeters (inch) unless otherwise stated

Key code selection

KA- Keyed Alike:

All lock cores are the same key code

KD- Keyed Differently: Multiple key codes provided in a non-master key system

MKKD - Master Keyed,

Keyed Differently: Multiple key codes provided in a master key system

Notes

Part Number includes 1 lock core and 2 keys

Installation Notes

- 1. Prepare panel and install latches shown on page 188.
- 2. Latch should be in unlatched position. The flats of the lock extender should be aligned with the flats on the housing.
- Take a lock core and orient the brass wafers to the internal ramped area of the housing. Push lock core into housing until it stops.
- 4. Insert key into lock core and turn to verify lock core is fully seated and operating properly.

5. Install cam.





PK Lock Cores *SOUTHCO®* Key-Choice System

- Lock cores ordered separately
- Greater flexibility in locking requirements

Material and Finish

Zinc alloy, chrome plated, black powder coated or with a stainless steel scalp



Key-Choice System

This icon indicates that a product is compatible with the $\textit{SOUTHCO}^{\circledast}$ Key-Choice System



For other lock core styles visit www.southco.com For additional details on the SOUTHCO® Key-Choice System go to www.security.southco.com

The *SOUTHCO®* Key-Choice System features a common lock core that fits a wide range of *SOUTHCO®* latches.

This system allows for the independent selection of the correct latch for your application and the lock core required to manage the security of the end product. The guide below shows each of the latches in the *SOUTHCO®* Key-Choice System that can be purchased without the lock core installed.

Lock cores are sold separately which provides:

- ⇒ The option to configure multiple latch styles with the same keying option
- ⇒ The ability to configure the same latch style with multiple keying options
- Inventory reduction by managing multiple keying options with the lock core, while latches remain without the core installed until keying assignment is desired

Latches in the SOUTHCO® Key-Choice System





INFO CLIC